

QUICK GUIDE CLAVIS ONE

Setup and paring a KingGates CLAVIS

What is CLAVIS

- CLAVIS is the new KingGates APP, let you control open the gate from nearby, and from anywhere around the world.
- CLAVIS keeping logs and information on your gate and the gate uses

What's CLAVIS needs

- A KingGates, gate automation system with control unit STAR G8. Firmware version xxx or above).
- User Apple or Android Smartphone.
- A CLAVIS Wi-Fi Dongle - WI-CLAVIS
- Internet Wi-Fi communication at the gate, with permission to access and password.
- Master and users can control the gate.
- Fully read this instructions pages.
- KingGates authorized expert to set up the system.

Preparation

- Check the internet connection through a Wi-Fi at the gate, check with a smartphone at the gate. If not, arrange internet connection and / or use Wi-fi extender (not part of the CLAVIS)
- download the KingGates CLAVIS APP from AppStore and GooglePlay store, to your phone.
- On the STAR G8 control unit; Plug-in the Wi-Fi dongle to the red KING-BUS connector.
- With a smartphone; go to setup > Wi-Fi and check for:
 - the Wi-Fi internet network
 - Check for a the CLAVIS Wi-Fi signal name «KING-NK2- <number>».
- on the smartphone open the CLAVIS App




2. Open a KingGates CLAVIS account


- the First CLAVIS APP setup will create AdminUser. More users or AdminUsers, can be added later.
- open the CLAVIS APP at the AdminUser Smartphone.
- at the bottom right corner of the screen - go to “not yet registered?”.
- fill-up the AdminUser details; Create a new password for the CLVIS, do not use your e-Mail account Password.



Open the APP

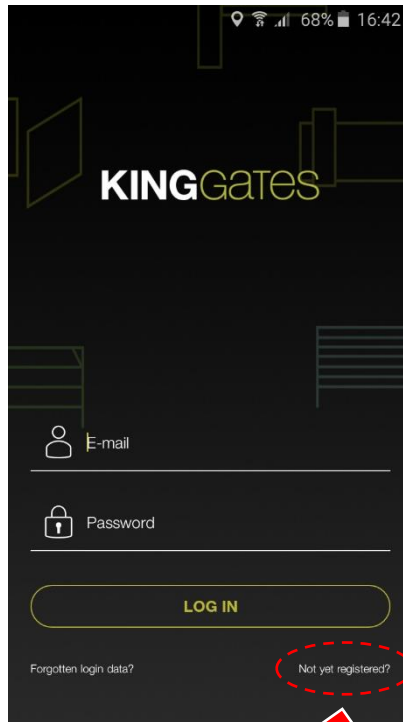

Go to «not yet registered?»

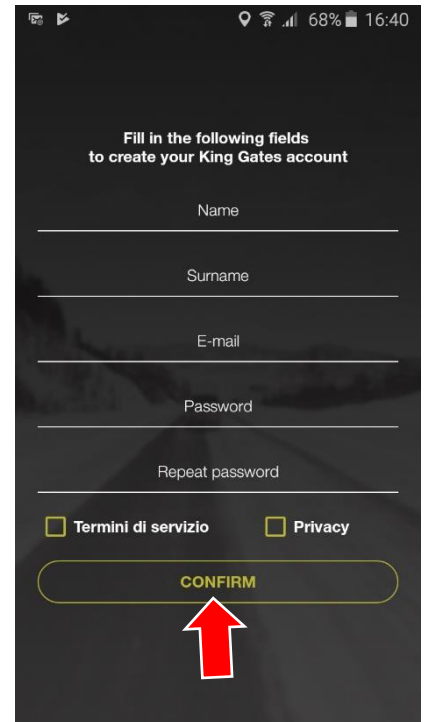


Fill up the Master/ User details. Tick that you read the terms of service and the terms of privacy (see our KingGates website)


- Check for an e-mail from CLAVIS. Confirm your account by following the instruction in the e-mail, and activate your KingGates CLAVIS account

3. Get your CLAVIS paired to the Gate System.


- AdminUser have full control on the CLAVIS. Standard Users gets limited access to the System setup. The First CLAVIS will be registered as AdminUser.
- Follow the screens below to add the first AdminUser

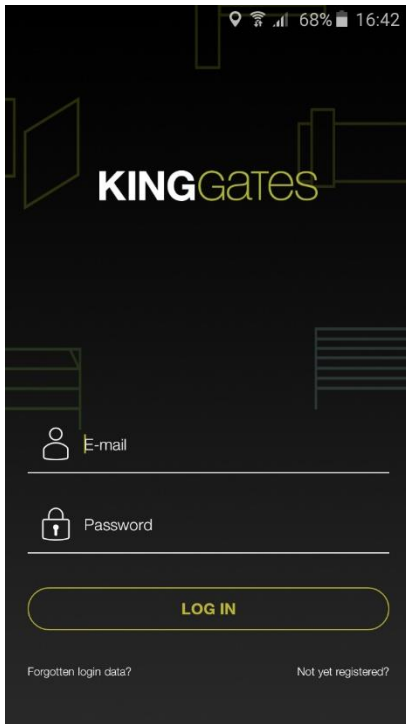

Log into the CLAVIS

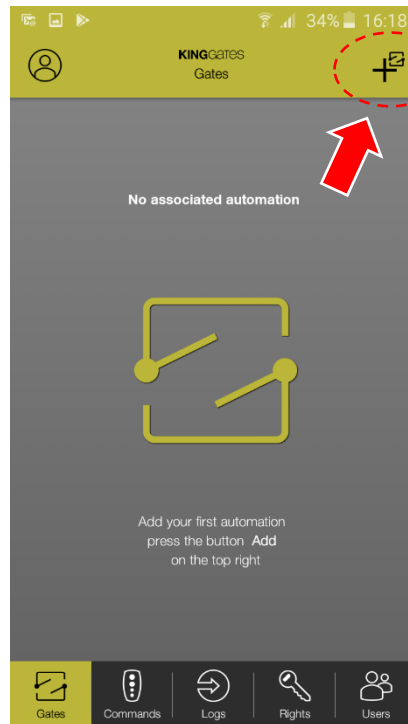


Press «+»

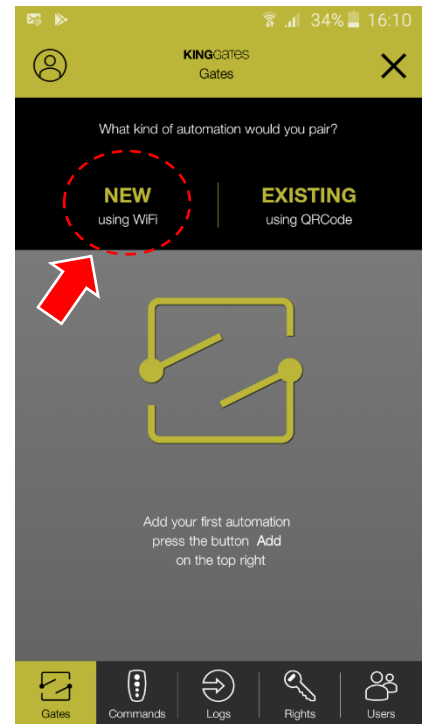


Press «NEW»

2. Pair the CLAVIS to the Wi-Fi internet network


- Get your Wi-Fi password ready

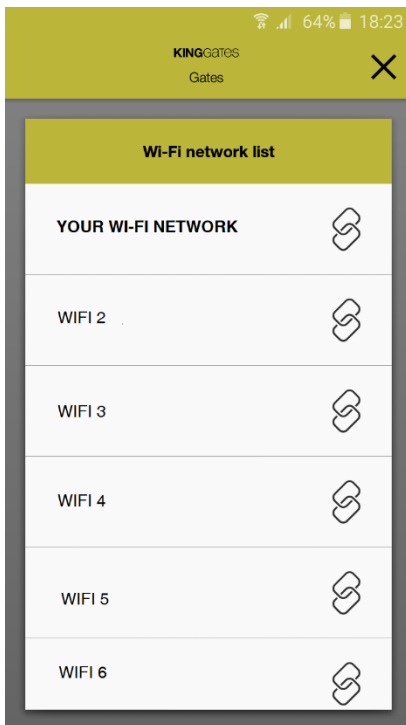

Choose your WI-FI network

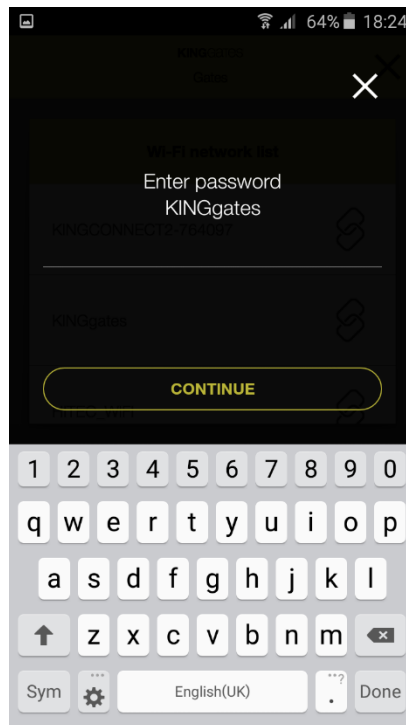

Enter the password of your Wi-Fi network

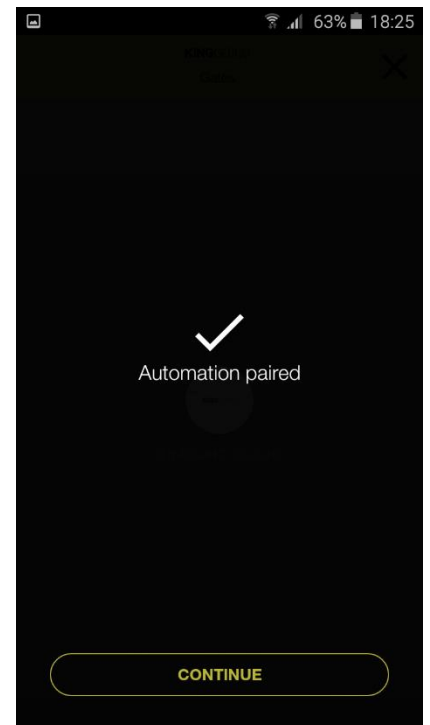


The automation is paired !

3. Standard Settings

a) Personalize your automation

After you registered, you can personalize your CLAVIS with:

- Giving it a name (of your choice)
- Choosing the opening method (open, close, ped etc.) (see F.A.Q.)
- Choosing when CLAVIS will open the gate for you (see F.A.Q.)
- Adding photo to tour CLAVIS

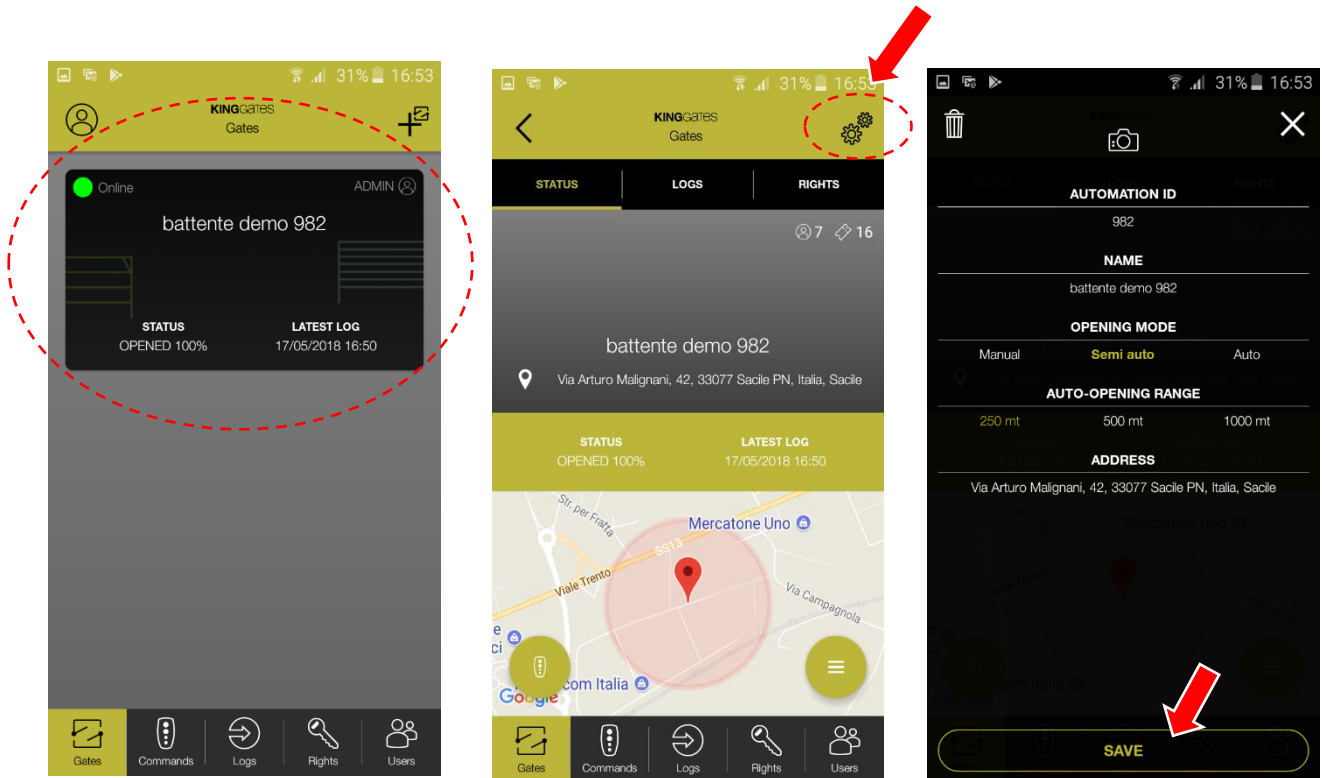


Press the black area


Press the setup
button at the top
right of the screen

Personalize the fields
and press SAVE.
Add your address
manually, to get an
accurate location of
the gate


b) Personalize the commands

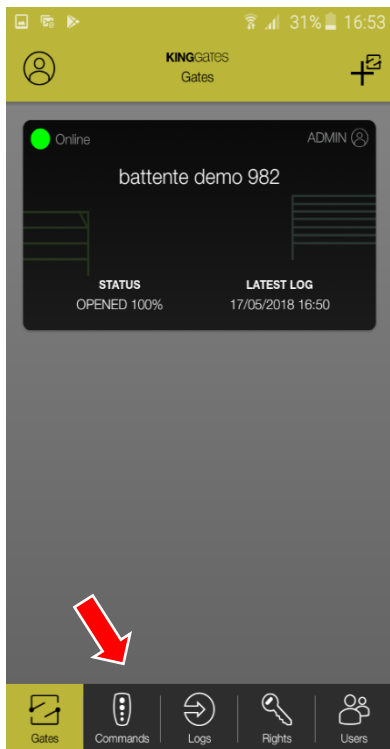

Press on the
Commands menu

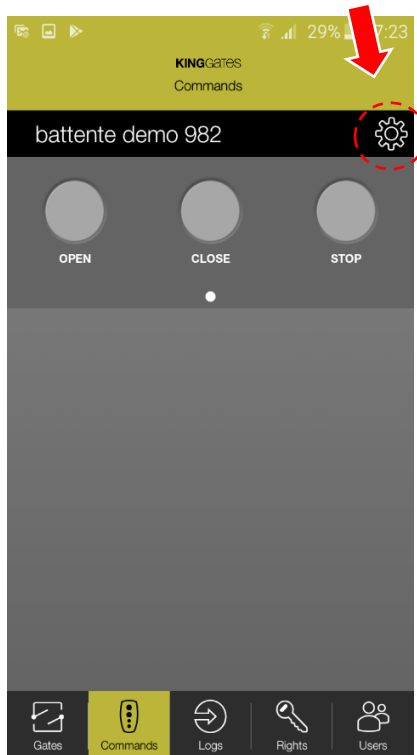

In the main panel,
press on the gearing
sign

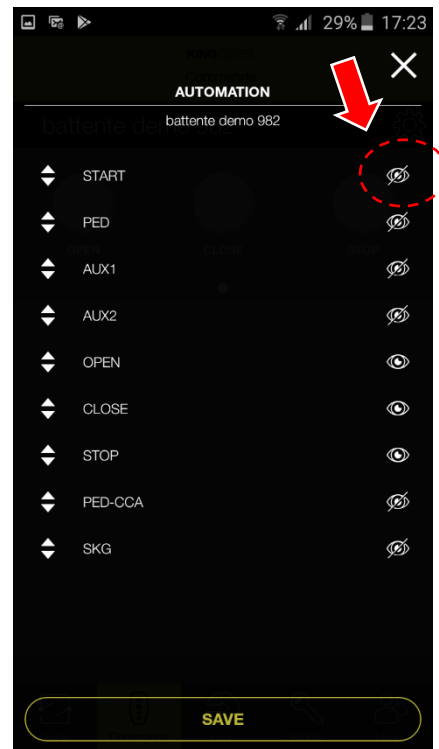

Personalize each
command by pressing
on the «eye» sign to
enabling/disabling it
from the main panel.

4. Users and definition

a) Admin and Sub User differences

After you became the first user, you can now add more users.


In this section, we will explain what is the difference between a ADMIN and a SUB USER, how to add an user and define his type, add permission, etc..

Differences between a ADMIN and SUB USER


	ADMIN	SUB USER
Add other users	✓	✗
Personalize automation	✓	✗
Create permissions	✓	✗
See the logs	✓	✓
Manage the rights	✓	✗
See the users associated	✓	✓
Personalize the commands	✓	✗

b) Adding new users


In this section, we will explain how to add other users, either ADMIN or SUB USER.

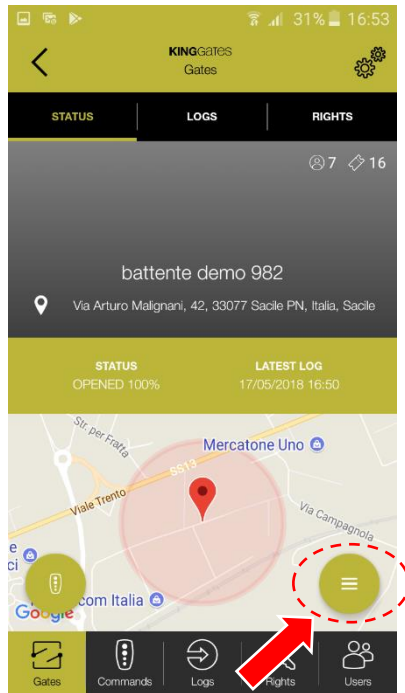

Enter in your automation then click on the sign indicated

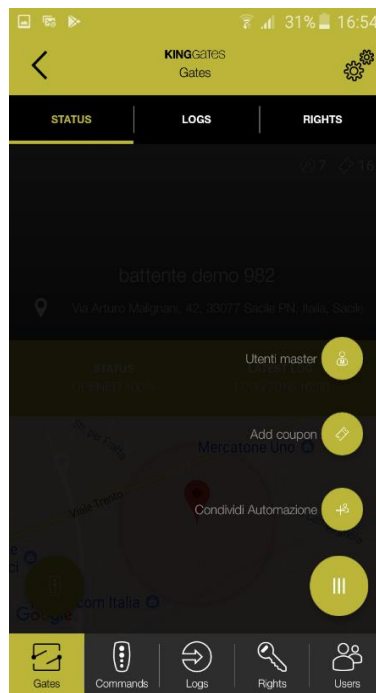

Click on «share automation»

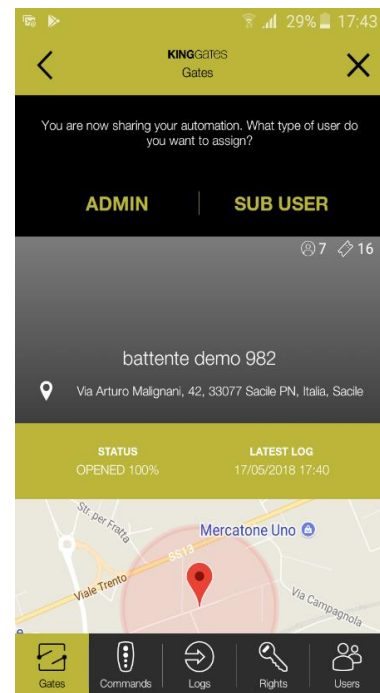


Choose which kind of user you want to add between: Admin or Sub User




Let the user scan the generated QR code

c) Acquirement of new users


In this section, we will explain how to acquire an access from a previously generated QR CODE. For this operation, the new user have to download the app and make the registration process

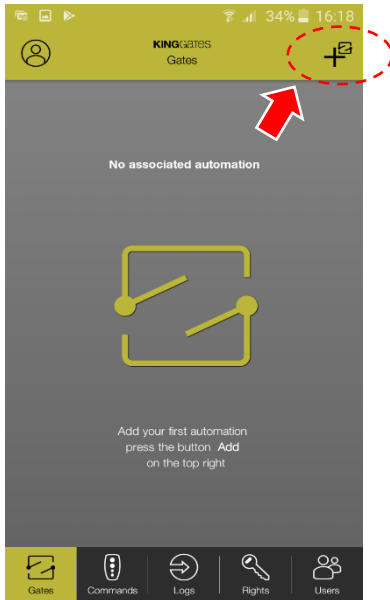


On the main panel, press the «+» sign

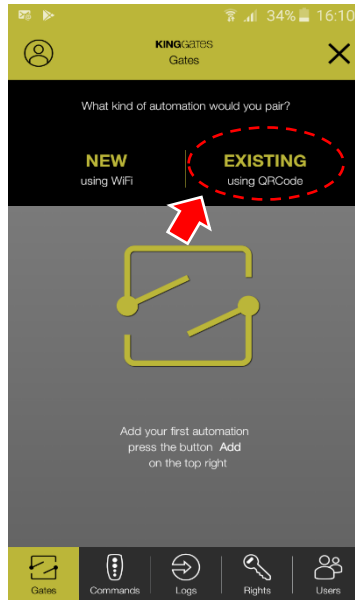

Press on «EXISTING»

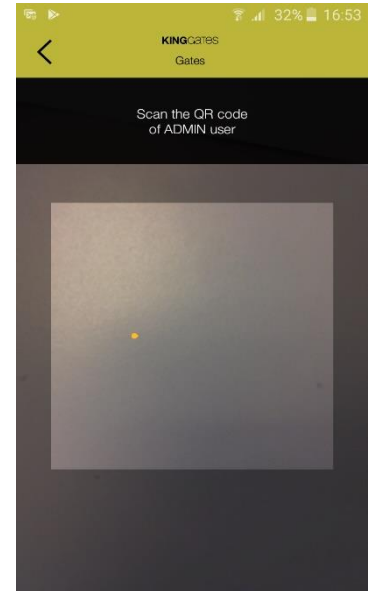


Scan the QR code created by the Admin user

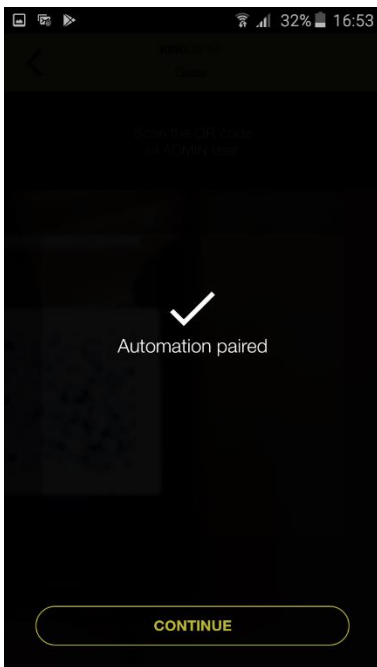


The automation is paired !

5. Creating and managing permissions


Creating permission

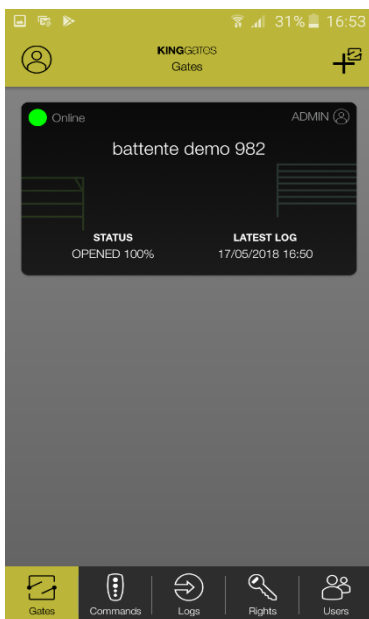

Enter in your automation

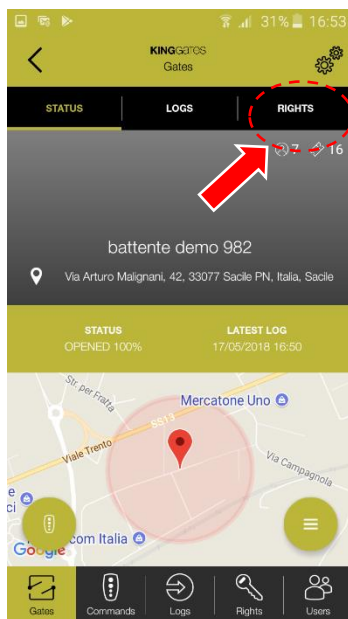


Click on «Rights»

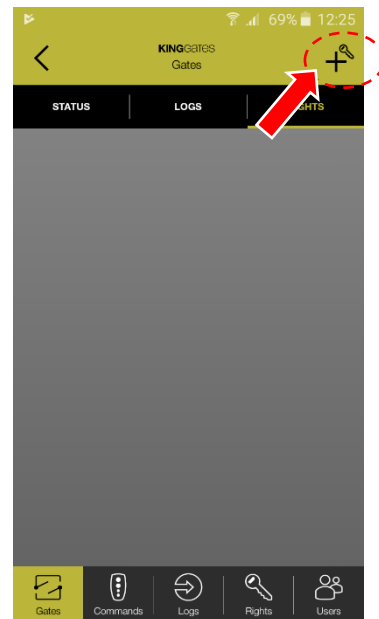


Press on the «+» sign



Give a name to the permission.
Choose the colour

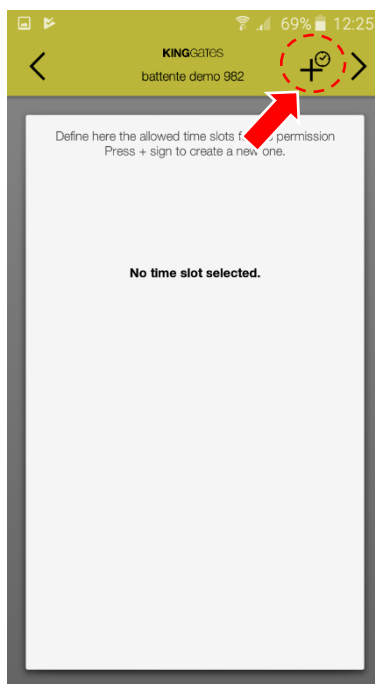


Press on the «+» sign

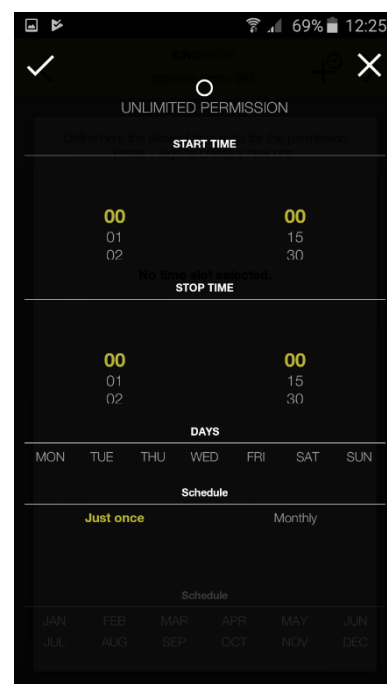


Choose the time slots


5. Creating and managing permissions

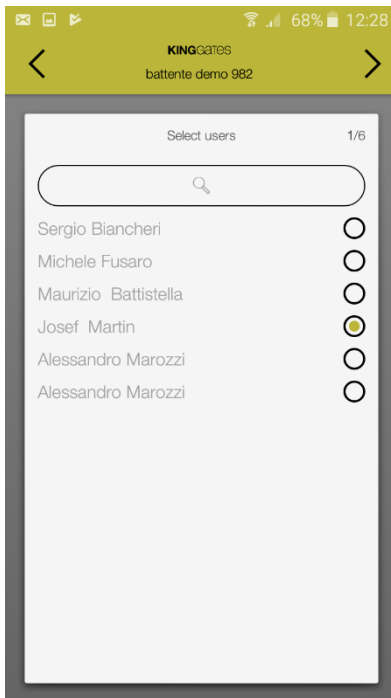

Choose the person that you want to give the permission to

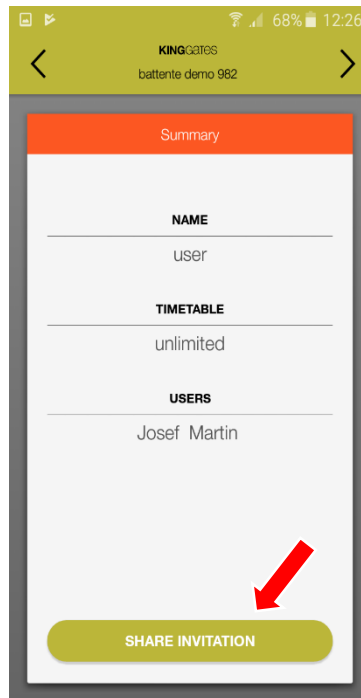

Once finished, the permission will be ready to be shared.
Press on «share invitation» to share a link

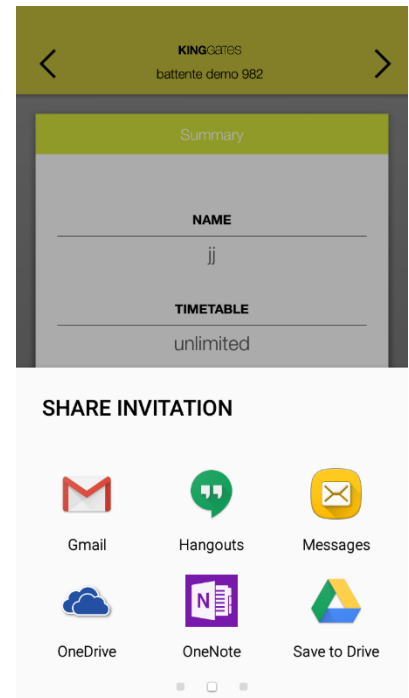

The invitation link can be shared via mail, whatsapp, message, etc.

The invited person will receive the link and when clicking the app will open and the user will be assigned to the created permission

F.A.Q.

Who sees the LOG?

The MASTER users can have a total access, the SLAVE users only for theirs

What do I see in the fourth screen?

The created permissions

What is a permission?

It is an authorization to the commands that can be limited in time. It can be common to more users

How do I create a permission?

Only the MASTER users can.

What do I see in the fifth screen?

it is only for the MASTER users, where they can see the registered users and the permissions created

What is the geolocalisation for ?

It is there to recognise when the smartphone is nearby the automation

How do I choose the opening range?

The opening range have to be choose according to the way that you want to operate the automation, you can choose the range when personalizing the automation. They are 3 range possible to set. After you choose the range you can then choose the opening

Why should I choose the opening mode?

Opening mode can be chosen in three option:

- *Automatic: when you are in the range of distance you choose when personalizing the automation, the gate will automatically open
N.B: be sure that your GPS location service is active.*
- *Semi-automatic: when you are in the range of distance you choose when personalizing the automation, a notification will appear on the screen your smartphone with a button "OPEN".*
- *Manual: to open the automation, you must go into the app menu and give the command manually.*